


Castor

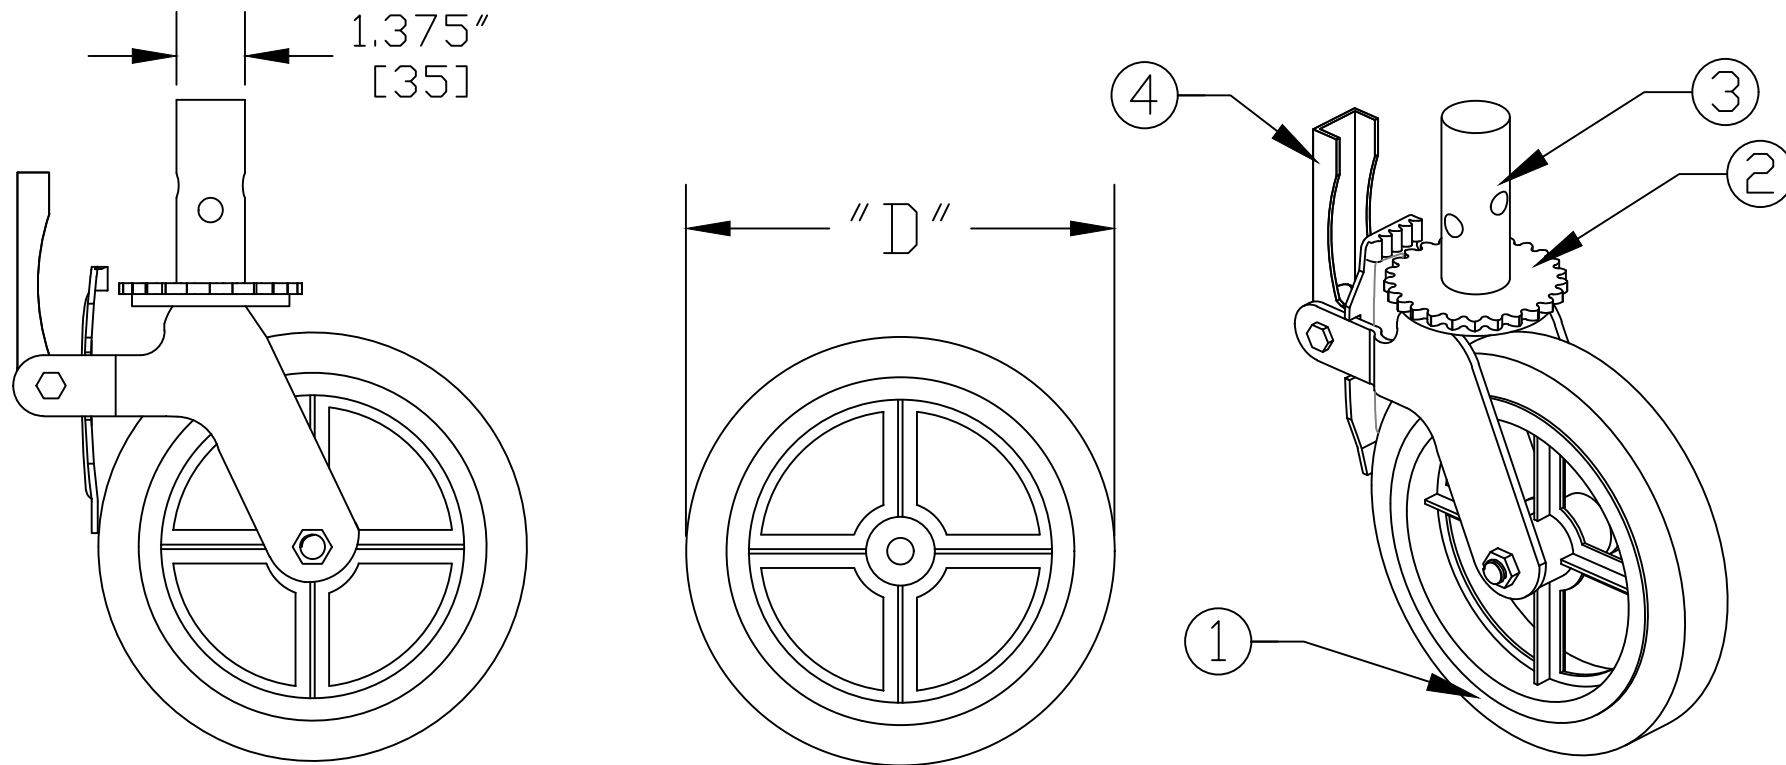

CASTOR DIAGRAM

NOTES:

1. THE SYSTEM COLUMN EXPLAINS IF THE CORRESPONDING ITEM IS TO BE USED WITH THE RING OR FRAME SYSTEM
2. CASTORS CAN BE USED WITH CASTOR JACKS TO ADJUST HEIGHTS OF FRAMES WHILE MAINTAINING MOBILITY
3. THE LOCK AND BRAKE LEVER [S.NO. 4] IS PULLED AWAY FROM THE SHAFT TO INHIBIT MOVEMENT AND ROTATION OF THE CASTOR
4. ALL ALT. UNITS ARE MILLIMETERS

ITEM NO.	DIAMETER "D"	WEIGHT	SYSTEM	COMPONENTS	
02C8500G	0'-8" [203]	5.20 kgs	FRAME	S.NO.	DESCRIPTION
				1	WHEEL
				2	ROTATION LOCK
				3	STANDARD SHAFT
				4	LOCK+BRAKE LEVER